

List of Warning/Indicator Lights



The units used on the speedometer, the tachometer gauge display, indicators and warning lights may differ depending on the model / type.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)
Brake system warning light (red indicator)



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)
Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)
ABS warning light



(Canada)



Brake system warning light (yellow indicator)



Electric power steering warning light



Pre-collision system warning light*

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



(In the fuel gauge)

Low fuel level warning light



Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



Tire pressure warning light



Master warning light

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



ECT SNOW indicator



ECT PWR indicator



SPORT mode indicator *



COMFORT mode indicator *



HEIGHT HIGH indicator *



Cruise control indicator



AFS OFF indicator



Slip indicator



Parking brake indicator (U.S.A.)



Parking brake indicator (Canada)



Brake hold standby indicator



Brake hold operated indicator



SRS airbag on-off indicator (without touch screen)




SRS airbag on-off indicator (with touch screen)

For further information, refer to the Owner's Manual.

* : If equipped

Spare Tire and Tool Compartment

■ Jack, tools, and spare tire

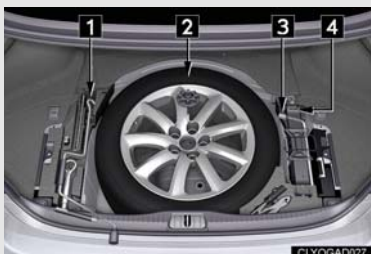

- 1 Jack handle
- 2 Spare tire
- 3 Wrench
- 4 Jack

■ Taking out the spare tire



- 1 Lift up the panel on the trunk floor.
- 2 Loosen the center fastener and remove the spare tire.

If the electronic key does not operate properly

■ Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the engine switch.
- 3 Press the engine switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: if equipped

For instructions on replacing the electronic key battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.



Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.23)



Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the engine switch. (→P.11)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the engine switch OFF.	Turn the engine switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The engine switch was turned to ACC mode while the driver's door was open (or the driver's door was opened while the engine switch was in ACC mode).	Turn the engine switch OFF and close the driver's door.
	The engine switch was turned OFF while the driver's door was open.	Close the driver's door.

Alarm	Situation	Correction procedure
Interior alarm sounds continuously. ^{*1}	When the engine switch is in IG-ON or ACC mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in P.	Shift the shift lever to P and turn the engine switch OFF.
Interior and exterior alarms sound continuously. ^{*1}	When the engine switch is in IG-ON or ACC mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in P.	Shift the shift lever to P, turn the engine switch OFF and close the driver's door again.
Interior alarm pings once. ^{*1}	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.	Start the engine with the electronic key present. ^{*2}
Interior alarm pings once and exterior alarm sounds 3 times. ^{*1}	The driver's door was closed after the key was carried outside the vehicle, and the engine switch was not turned OFF.	Turn the engine switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the engine switch was not OFF.	Bring the electronic key back into the vehicle.

^{*1}: A message will be shown on the multi-information display in the instrument cluster.

^{*2}: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus